



Use only for initial deployment.  
For adding a second node, see **ztC Edge 100i-s Systems: Adding a Node.**

## ztC Edge 100i-s Systems: Deploying a Single-Node System

Deployment requires the following components:

### User-supplied Components



Monitor  
(HDMI)



Keyboard  
(USB)



Network cable



Networked  
PC or laptop



1/8" Slotted  
screwdriver  
(if mounting)



#2 Phillips  
screwdriver  
(if mounting)

**Contact network administrator for settings.  
If using DHCP, only static System IP address required.**

System IP address  
(static required)    \_ \_ . \_ \_ . \_ \_ . \_ \_

Node0 IP address    \_ \_ . \_ \_ . \_ \_ . \_ \_

Gateway address    \_ \_ . \_ \_ . \_ \_ . \_ \_

 
Network mask    \_ \_ . \_ \_ . \_ \_ . \_ \_

DNS servers    \_ \_ . \_ \_ . \_ \_ . \_ \_

(System and node IP address must be on same subnet.)

New **admin** password \_\_\_\_\_

### Stratus Components




ztC Edge node




Power cable



 
Power adapter




Power adapter  
DIN/wall mount plate

 


Rubber feet (4)

 

ztC Edge DIN rail  
mount plate

 

ztC Edge DIN rail  
mount brackets (3)

 

ztC Edge wall  
mount brackets (2)




M3\*4L  
flat-head  
Phillips-head  
screws (9)




M3\*5L  
round-head  
Phillips-head  
screws (4)

For ztC Edge Release Notes and documentation, please visit <http://ztcedgedoc.stratus.com>.  
To access other ztC Edge self-help resources, including Knowledge Base articles and software downloads,  
visit Stratus Customer Service at <http://www.stratus.com/support>.


# 1 Connect keyboard and monitor to node, then connect power.

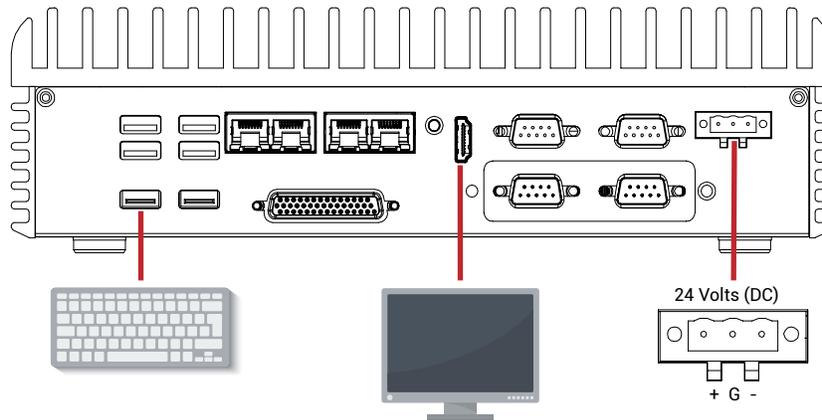


# 2 Node powers on automatically. If not, press power button. Wait for node to boot, press **Shift+S** to deploy single-node system, then follow on-screen instructions. (Node might beep while booting, which is normal.)

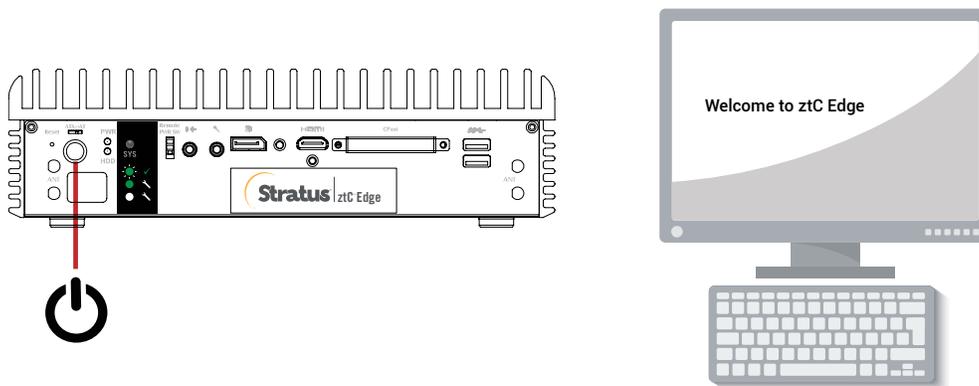

# 3 When instructed, connect P1 port of node to your existing LAN. (If on-screen status displays **waiting for second node on network**, press **1** to start over and press **Shift+S** to deploy single-node system.)

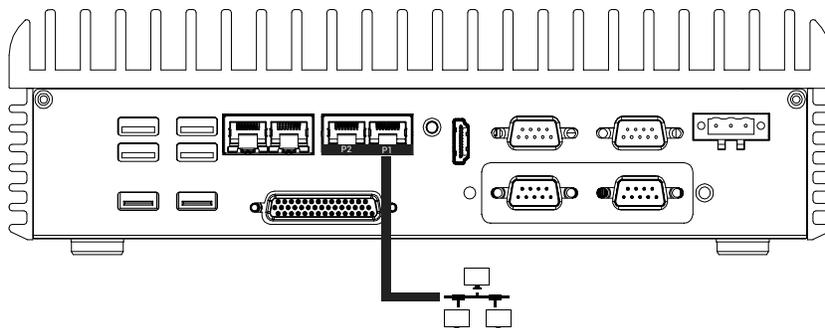


**4** Wait up to 5 minutes for system to display `https://nnn.nnn.nnn.nnn` address, and for SYS LED to blink. Record address for step 5.

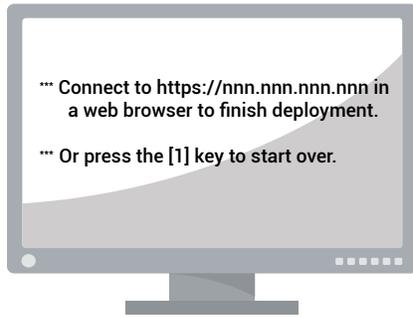


`https://---.---.---.---`

**5** On networked PC or laptop, open web browser and enter address from step 4 to continue configuring system. If security message is displayed, follow browser instructions to allow site to load. Log on with default username and password of **admin**. Complete **EULA** and **Config** screens.

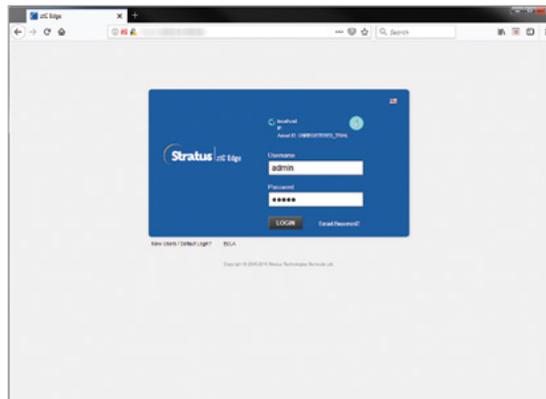

**6** On **License** screen, follow link to register system and download permanent license key. See separate registration sheet for ASSET ID and instructions. Install license key on system and set new **admin** password to complete deployment.

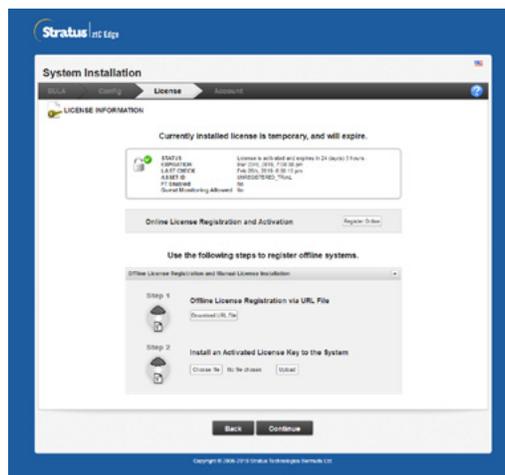


Recommended

Before using system, ensure it is running latest software. See Release Notes for details and download software from <https://www.stratus.com/services-support/downloads>.


Optional

Disconnect keyboard and monitor for headless operation. Fasten captive screws on power connector using 1/8" slotted screwdriver.

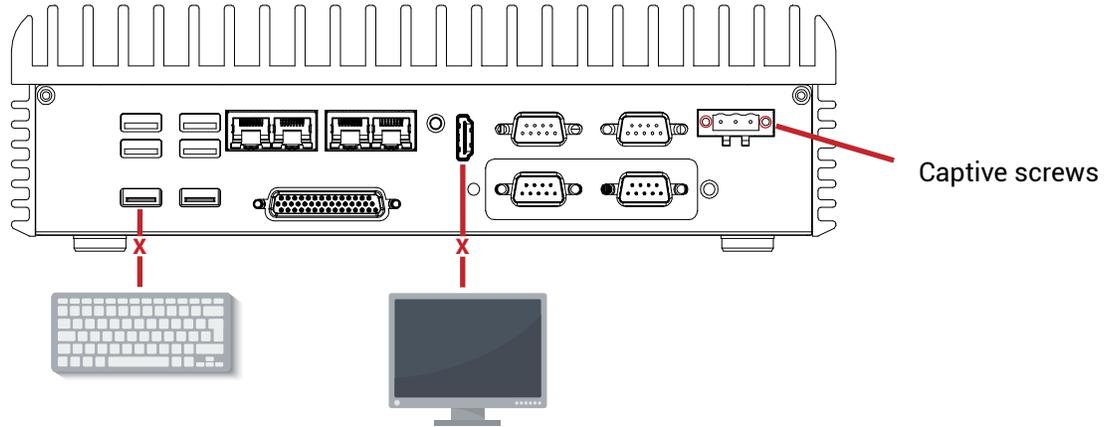

Optional

Fasten DIN rail mount or wall mount to node using #2 Phillips screwdriver. Or, install rubber feet for freestanding node only.

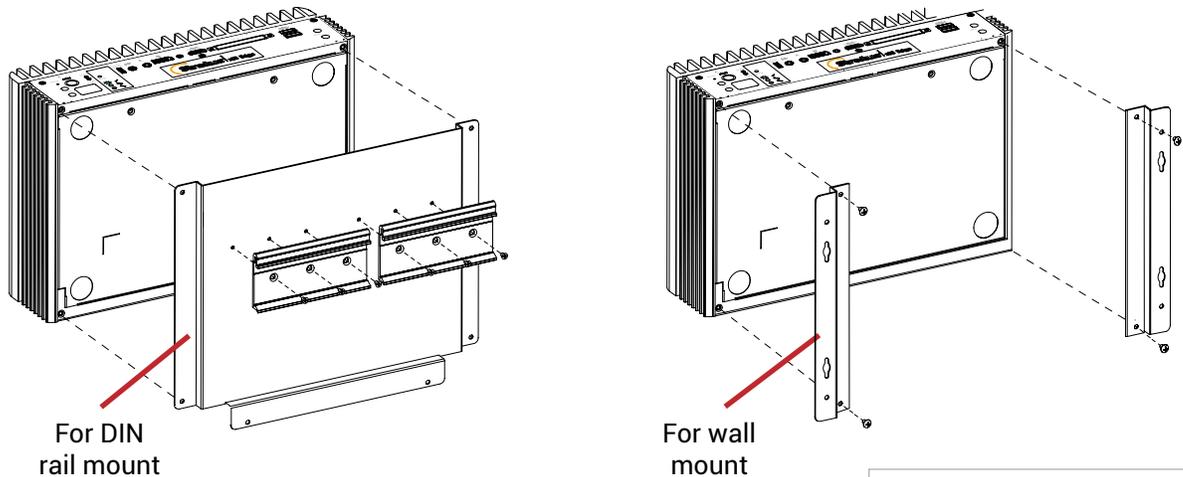

Rubber feet for freestanding node

