



Use only for initial deployment.
For node replacement, see **ztC Edge
100i Systems: Replacing a Node.**



ztC Edge 100i Systems: Deploying the System

User-supplied Components



Monitor
(HDMI)



Keyboard
(USB)



Network cables
(2)



Networked
PC or laptop



1/8" Slotted
screwdriver
(if mounting)



#2 Phillips
screwdriver
(if mounting)

**Contact network administrator for settings.
If using DHCP, only static System IP address required.**

System IP address
(static required) _ _ _ . _ _ _ . _ _ _ . _ _ _

Node0 IP address _ _ _ . _ _ _ . _ _ _ . _ _ _

Node1 IP address _ _ _ . _ _ _ . _ _ _ . _ _ _

Gateway address _ _ _ . _ _ _ . _ _ _ . _ _ _

 
Network mask _ _ _ . _ _ _ . _ _ _ . _ _ _

DNS servers _ _ _ . _ _ _ . _ _ _ . _ _ _

(System and node IP addresses must be on same subnet.)

New **admin** password _ _ _ _ _


Stratus Components




ztC Edge nodes (2)



 
Power cables (2)



Power adapters (2)

 


Power adapter
DIN/wall mount plates (2)

 


Rubber feet (8)



 
Network cables
(blue and yellow)



ztC Edge DIN rail
mount plates (2)

 

ztC Edge DIN rail
mount brackets (6)

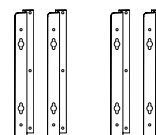 

ztC Edge wall
mount brackets (4)



 
M3*4L
flat-head
Phillips-head
screws (18)




M3*5L
round-head
Phillips-head
screws (8)

For ztC Edge Release Notes and documentation, please visit <http://ztcedgedoc.stratus.com>.
To access other ztC Edge self-help resources, including Knowledge Base articles and software downloads,
visit Stratus Customer Service at <http://www.stratus.com/support>.


1 Connect keyboard and monitor to one node, then connect power.

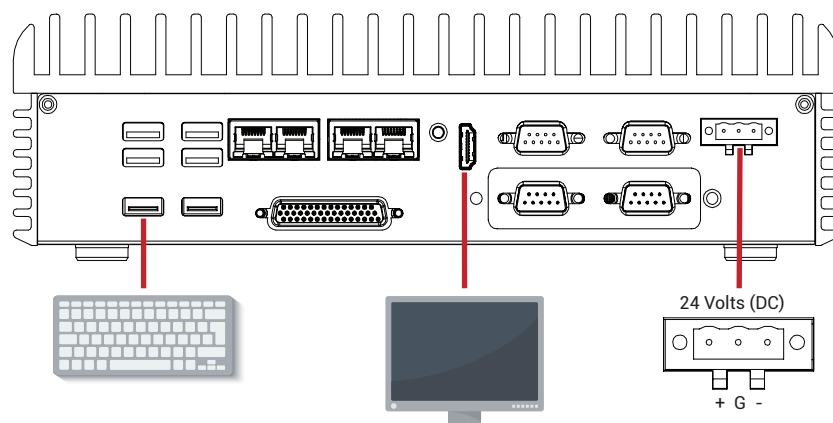


 
2 Node powers on automatically. If not, press power button. Wait for node to boot, press **1** to deploy first node in dual-node system, then follow on-screen instructions. (Node might beep while booting, which is normal.)

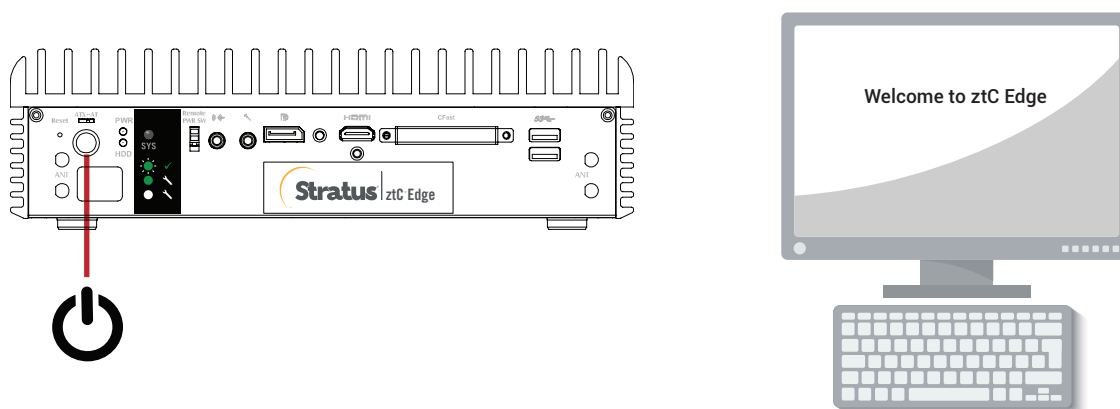

 3 When instructed, connect blue and yellow network cables from first node to second node, then connect P1 port of each node to your existing LAN. Connect power to second node and verify that it powers on.

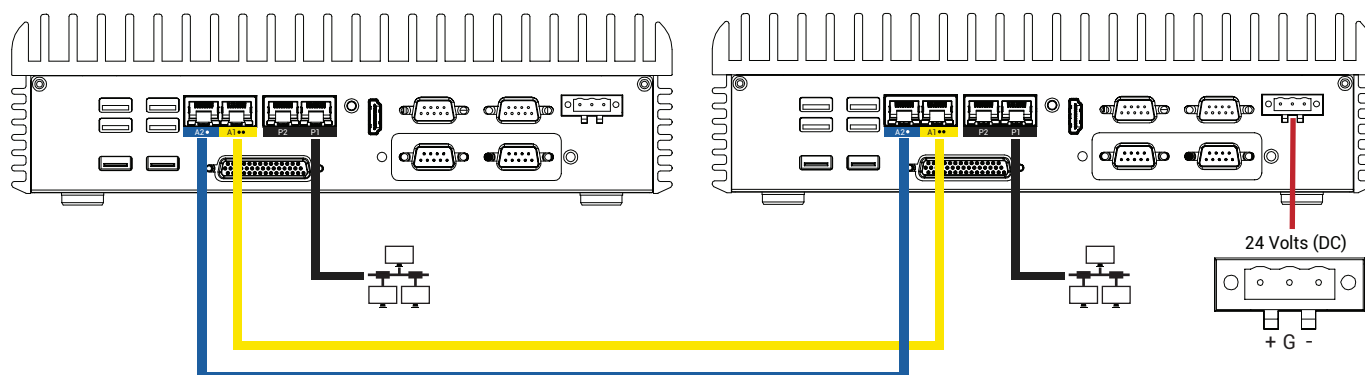


 4 Wait up to 15 minutes for system to display `https://nnn.nnn.nnn.nnn` address, and for SYS LED to blink on both nodes. Record address for use in step 5.

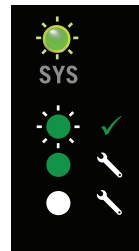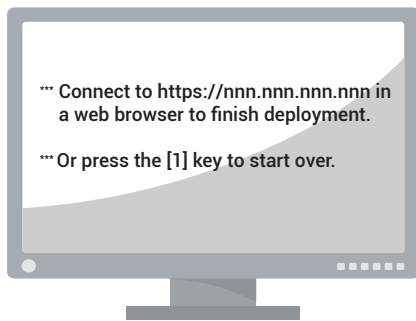


`https://_ _ _ . _ _ _ . _ _ _ . _ _ _`

 5 On networked PC or laptop, open web browser and enter address from step 4 to continue configuring system. If security message is displayed, follow browser instructions to allow site to load. Log on with default username and password of **admin**. Complete **EULA** and **Config** screens.

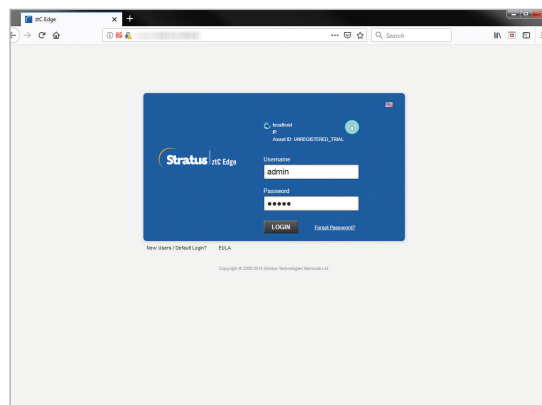

 6 On **License** screen, follow link to register system and download permanent license key. See separate registration sheet for ASSET ID and instructions. Install license key on system and set new **admin** password to complete deployment.

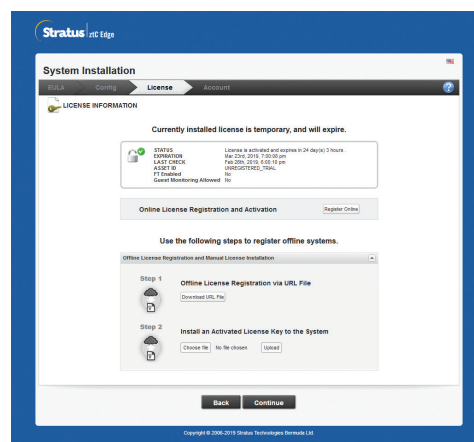


Recommended

Before using system, ensure it is running latest software. See Release Notes for details and download software from <https://www.stratus.com/services-support/downloads>.



Optional

 Disconnect keyboard and monitor for headless operation. On both nodes, fasten captive screws on power connectors using 1/8" slotted screwdriver.

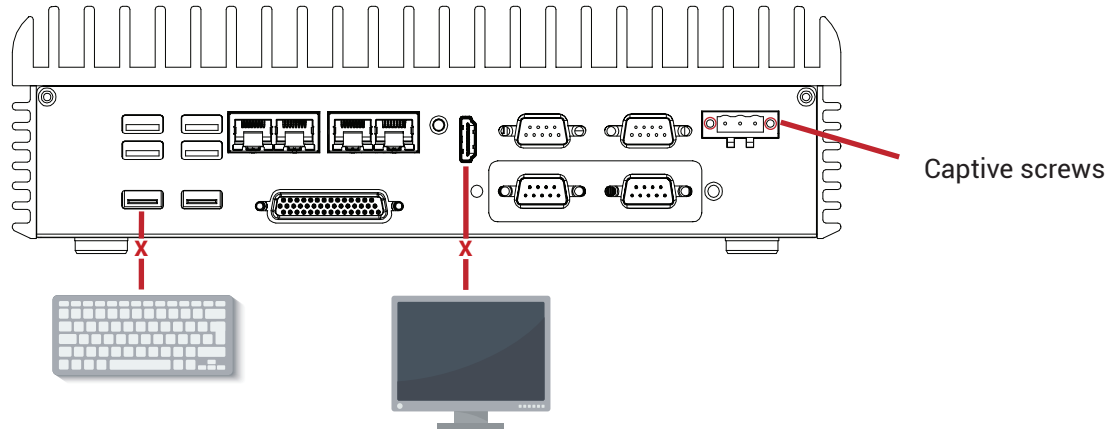


Optional

  Fasten DIN rail mount or wall mount to each node using #2 Phillips screwdriver. Or, install rubber feet for freestanding nodes only.

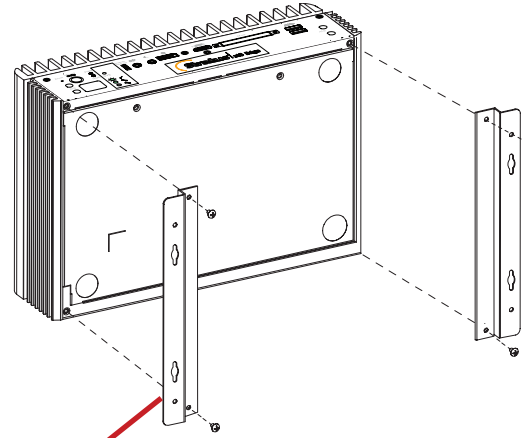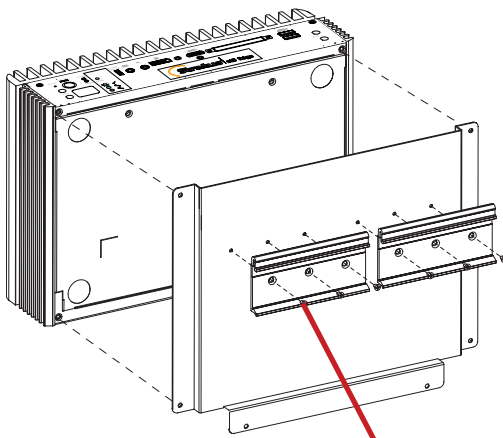

 Power adapter mount plate for DIN (shown) or wall mount



Rubber feet for freestanding node

