



 
Use only for initial deployment.  
For adding a second node, see **ztC Edge 100i-s/110i-s Systems: Adding a Node.**

**ztC Edge 100i-s/110i-s Systems: Deploying a Single-Node System**

User-supplied Components



Monitor (HDMI)



Keyboard (USB)



Networked PC or laptop



1/8" Slotted screwdriver (if mounting)



#2 Phillips screwdriver (if mounting)



Network cable



Signal ground wire and connector (optional)

**Contact network administrator for settings.**  
**If using DHCP, only static System IP address required.**

System IP address (static required) \_\_\_\_\_ . \_\_\_\_\_ . \_\_\_\_\_ . \_\_\_\_\_

Node0 IP address \_\_\_\_\_ . \_\_\_\_\_ . \_\_\_\_\_ . \_\_\_\_\_

Gateway address \_\_\_\_\_ . \_\_\_\_\_ . \_\_\_\_\_ . \_\_\_\_\_

Network mask \_\_\_\_\_ . \_\_\_\_\_ . \_\_\_\_\_ . \_\_\_\_\_


DNS servers \_\_\_\_\_ . \_\_\_\_\_ . \_\_\_\_\_ . \_\_\_\_\_

(System and node IP address must be on same subnet.)


New admin password \_\_\_\_\_

Systems Overview

ztC Edge 100i Family (front view)

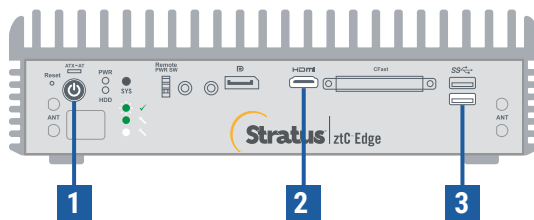


ztC Edge 100i Family (rear view)

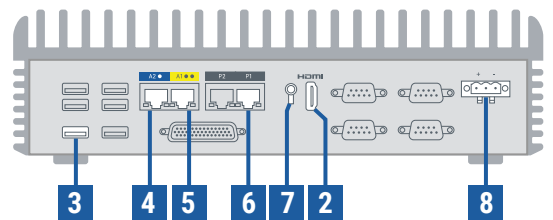


1. Power button
2. HDMI connector (monitor)
3. USB connector (keyboard)
4. A2 port (blue network)
5. A1 port (yellow network)
6. P1 connector (LAN)
7. Signal ground connector
8. Power connector

ztC Edge 110i Family (front view)

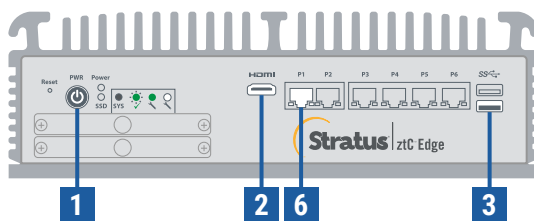


ztC Edge 110i Family (rear view)

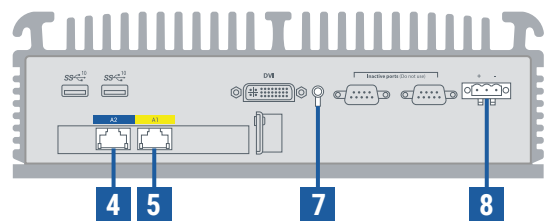


For ztC Edge Release Notes and documentation, please visit <http://ztcedgedoc.stratus.com>.  
To access other ztC Edge self-help resources, including Knowledge Base articles and software downloads, visit Stratus Customer Service at <http://www.stratus.com/support>.


# 1 Connect monitor and keyboard to node, then connect power.

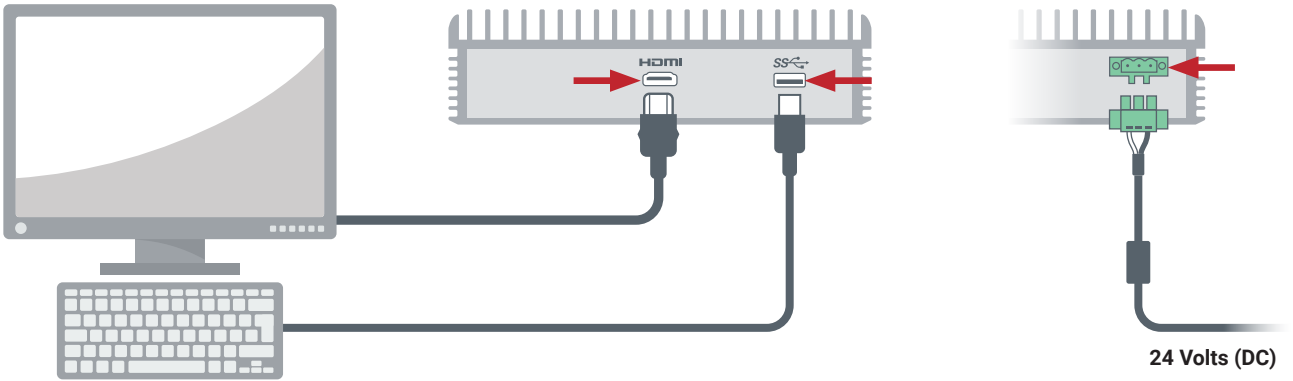



# 2 Node powers on automatically. If not, press power button. Wait for node to boot, press **s** to deploy single-node system, then follow on-screen instructions. (Node might beep while booting, which is normal.)

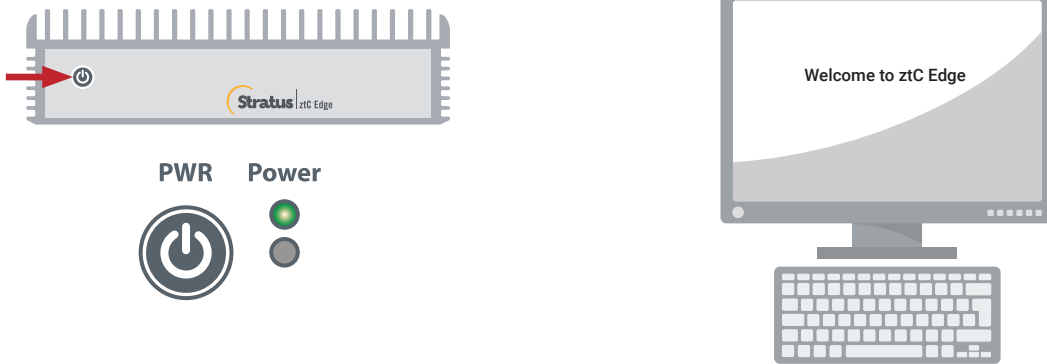

# 3 When instructed, connect P1 port of node to your existing LAN. (If on-screen status displays **waiting for second node on network**, press **1** to start over and press **s** to deploy single-node system.)

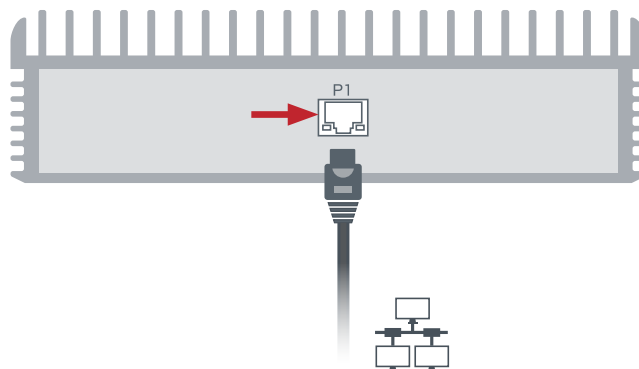


**4** Wait up to 5 minutes for system to display `https://nnn.nnn.nnn.nnn` address, and for SYS LED to flash. Record address for use in step 5.

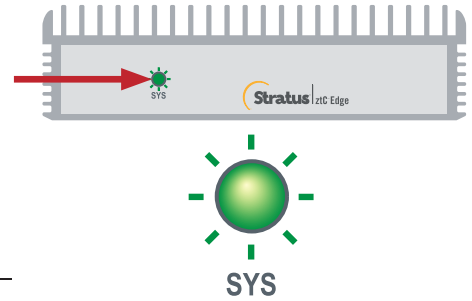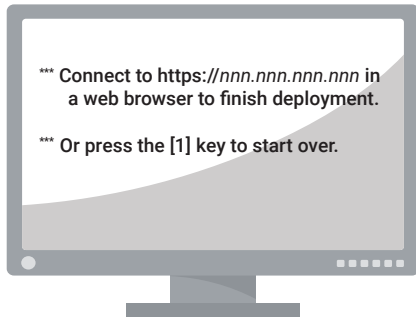


`https:// _ _ _ . _ _ _ . _ _ _ . _ _ _`

**5** On networked PC or laptop, open web browser and enter address from step 4 to continue configuring system. If security message appears, follow browser instructions to allow site to load. Log on with default username and password of **admin** (or other credentials, if provided). Complete **EULA** and **Config** screens.

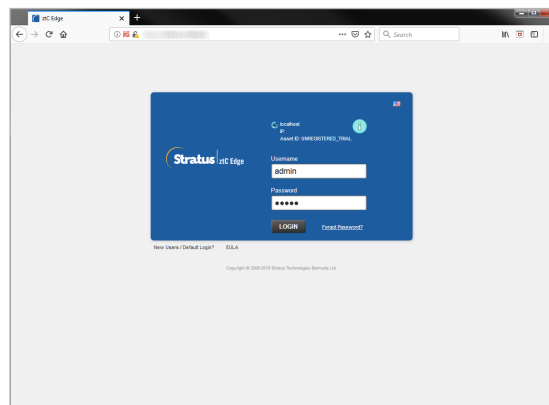


**6** On **License** screen, follow link to register system and download permanent license key. See separate registration sheet for ASSET ID and instructions. Install license key on system and set new **admin** password to complete deployment.

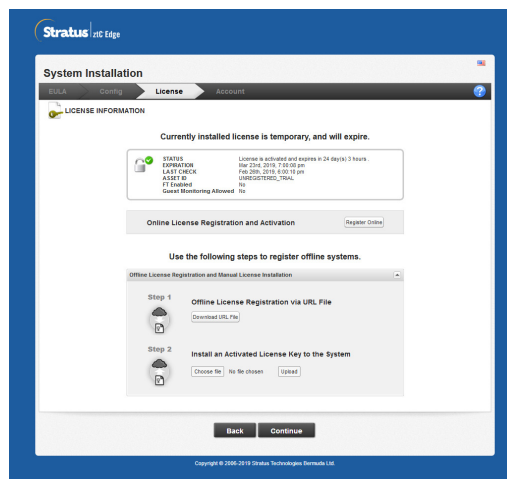

**Recommended** Before using system, ensure it is running latest software. See **Release Notes** for details and download software from <https://www.stratus.com/services-support/downloads>.

**Optional** Disconnect monitor and keyboard for headless operation. Fasten captive screws on power connector using 1/8" slotted screwdriver. Install user-supplied signal ground wire.

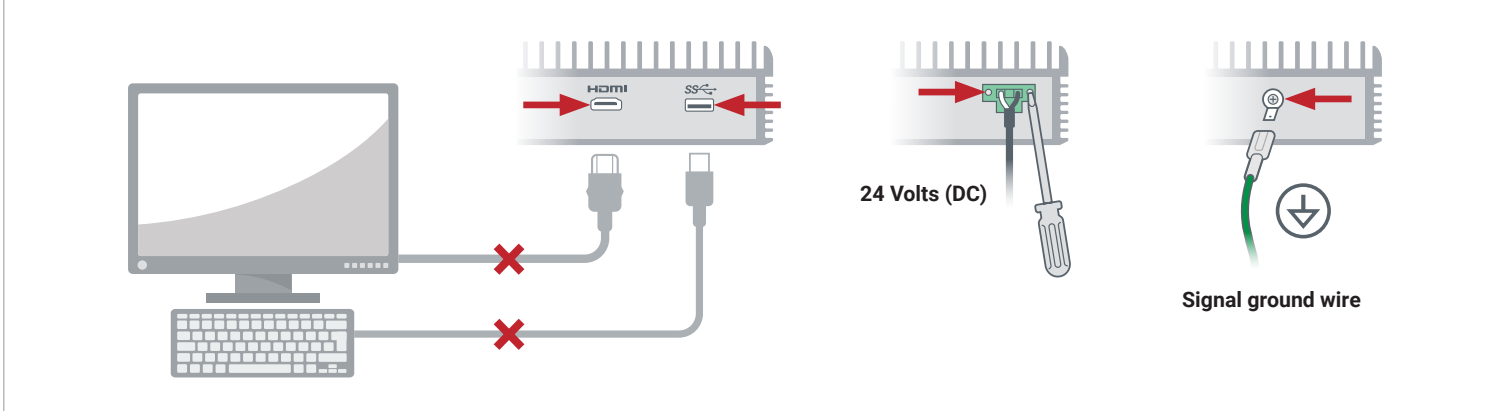

**Optional** Fasten DIN rail mount or wall mount to node using #2 Phillips screwdriver. Or, install rubber feet for freestanding node only.

