



 
Use only for initial deployment.
For node replacement, see **ztC Edge 100i/110i Systems: Replacing a Node.**

ztC Edge 100i/110i Systems: Deploying a Dual-Node System

User-supplied Components



Monitor (HDMI)



Keyboard (USB)



Networked PC or laptop



1/8" Slotted screwdriver (if mounting)



#2 Phillips screwdriver (if mounting)



Network cables (2)



Signal ground wire and connector (2) (optional)

Contact network administrator for settings. If using DHCP, only static System IP address required.

System IP address (static required) _____ . _____ . _____ . _____

Node0 IP address _____ . _____ . _____ . _____

Node1 IP address _____ . _____ . _____ . _____

Gateway address _____ . _____ . _____ . _____

Network mask _____ . _____ . _____ . _____


DNS servers _____ . _____ . _____ . _____

(System and node IP address must be on same subnet.)


New admin password _____

Systems Overview

ztC Edge 100i Family (front view)

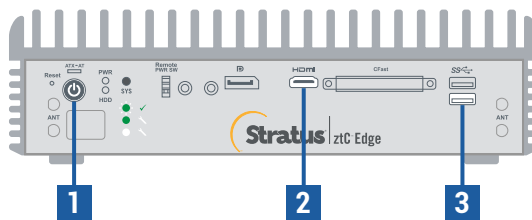


ztC Edge 100i Family (rear view)

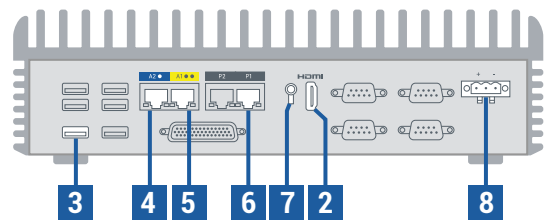


1. Power button
2. HDMI port (monitor)
3. USB port (keyboard)
4. A2 port (blue network)
5. A1 port (yellow network)
6. P1 port (LAN)
7. Signal ground connector
8. Power connector

ztC Edge 110i Family (front view)

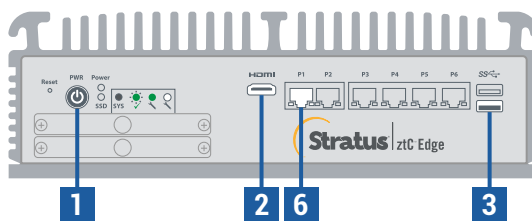


ztC Edge 110i Family (rear view)

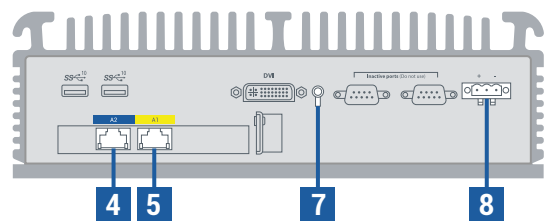


For ztC Edge Release Notes and documentation, please visit <http://ztcedgedoc.stratus.com>.
To access other ztC Edge self-help resources, including Knowledge Base articles and software downloads, visit Stratus Customer Service at <http://www.stratus.com/support>.


1 Connect monitor and keyboard to node, then connect power.

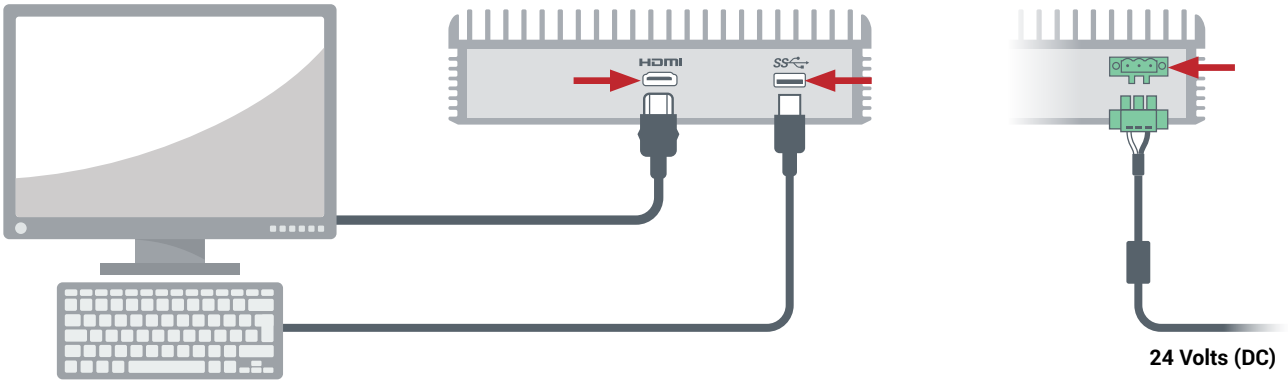



2 Node powers on automatically. If not, press power button. Wait for node to boot, press **1** to deploy first node in dual-node system (or **c** to continue redeploying system that was preconfigured for you), then follow on-screen instructions. Node might beep while booting, which is normal.

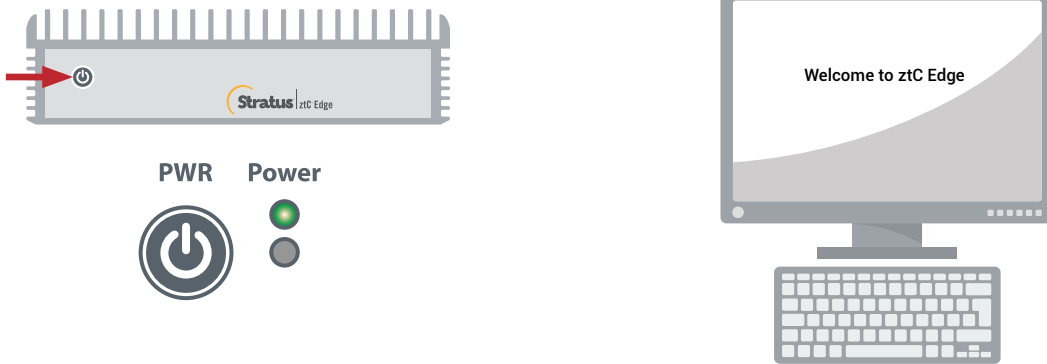

3 When instructed, connect blue and yellow network cables from first node to second node (A2 and A1 ports), and connect P1 port of each node to your existing LAN. Connect power to second node and verify that it powers on.

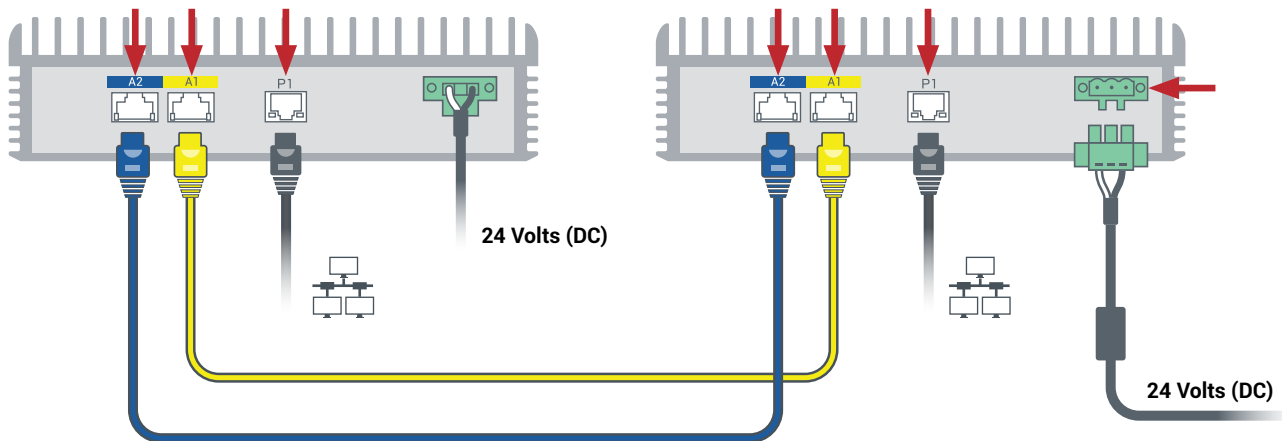


4 Wait up to 15 minutes for system to display `https://nnn.nnn.nnn.nnn` address, and for SYS LED to flash on both nodes. Record address for use in step 5.

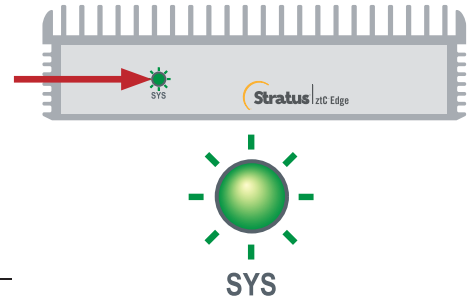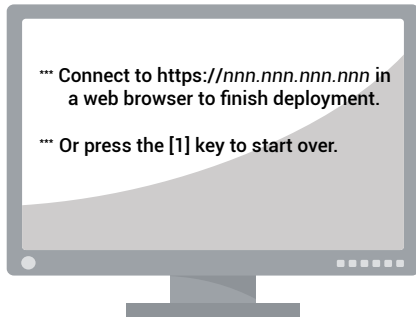


`https://_ _ _ . _ _ _ . _ _ _ . _ _ _`

5 On networked PC or laptop, open web browser and enter address from step 4 to continue configuring system. If security message appears, follow browser instructions to allow site to load. Log on with default username and password of **admin** (or other credentials, if provided). Complete **EULA** and **Config** screens.

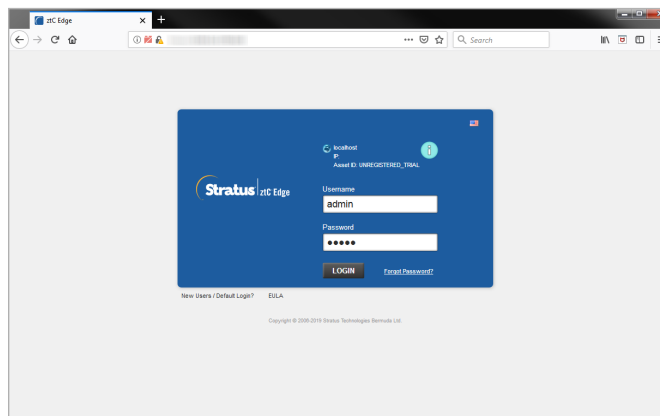


6 On **License** screen, follow link to register system and download permanent license key. See separate registration sheet for ASSET ID and instructions. Install license key on system and set new **admin** password to complete deployment.

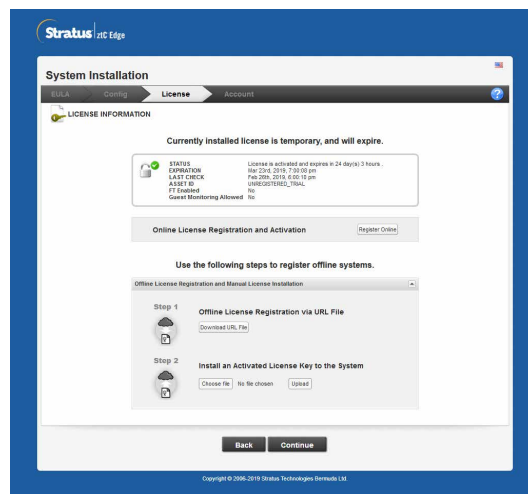

Recommended Before using system, ensure it is running latest software. See **Release Notes** for details and download software from <https://www.stratus.com/services-support/downloads>.

Optional Disconnect monitor and keyboard for headless operation. Fasten captive screws on power connectors using 1/8" slotted screwdriver. Install user-supplied signal ground wires.

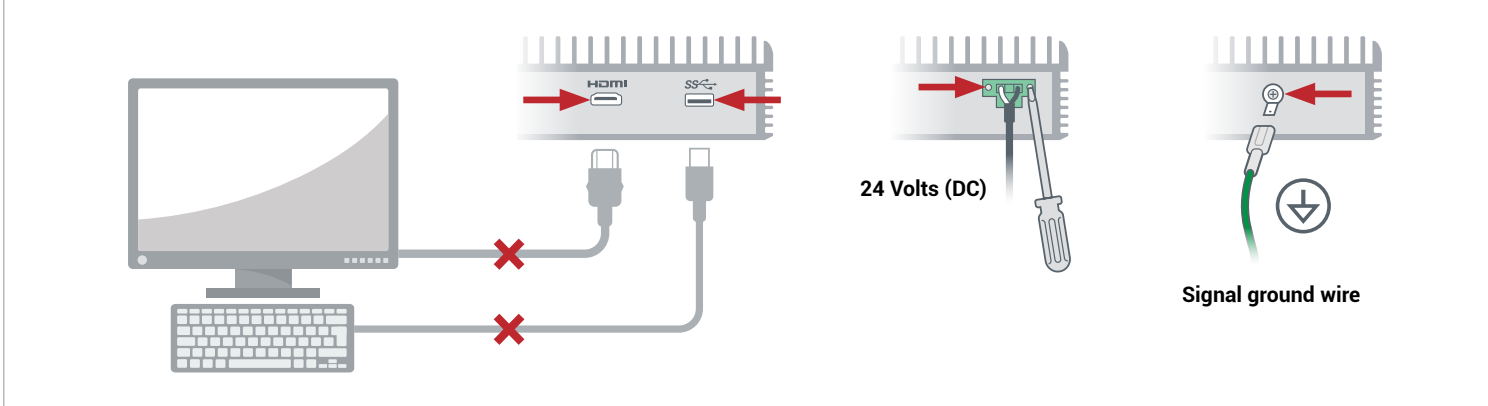

Optional Fasten DIN rail mount or wall mount to nodes using #2 Phillips screwdriver. Or, install rubber feet for freestanding nodes only.

