



 
Use only for initial deployment.
For adding a second node, see **ztC Edge 100i/110i Systems: Adding a Node.**

ztC Edge 100i/110i Systems: Deploying a Single-Node System

User-supplied Components



Monitor (HDMI)



Keyboard (USB)



Networked PC or laptop



1/8" Slotted screwdriver (if mounting)



#2 Phillips screwdriver (if mounting)



Network cable



Signal ground wire and connector (optional)

Contact network administrator for settings.
If using DHCP, only static System IP address required.

System IP address (static required) _____ . _____ . _____ . _____

Node0 IP address _____ . _____ . _____ . _____

Gateway address _____ . _____ . _____ . _____

Network mask _____ . _____ . _____ . _____

DNS servers _____ . _____ . _____ . _____


(System and node IP address must be on same subnet.)

New admin password _____


Systems Overview

1. Power button
2. HDMI port (monitor)
3. USB port (keyboard)
4. A2 port (blue network)
5. A1 port (yellow network)
6. P1 port (LAN)
7. Signal ground connector
8. Power connector


ztC Edge 100i Systems (front view)

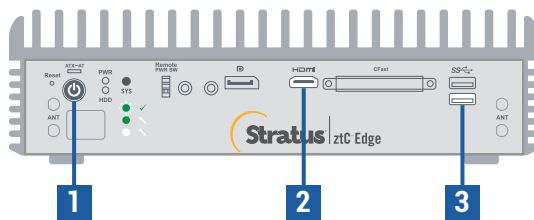


ztC Edge 100i Systems (rear view)

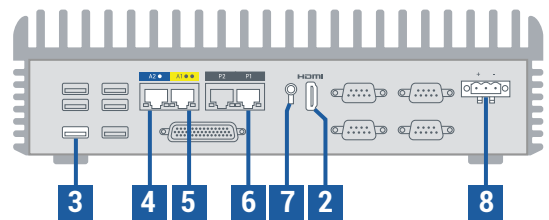

ztC Edge 110i Systems (front view)

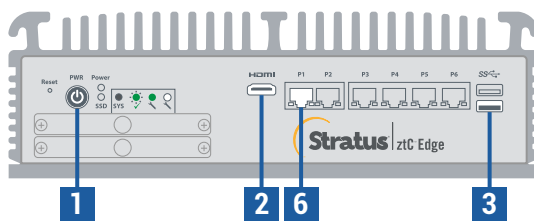


ztC Edge 110i Systems (rear view)

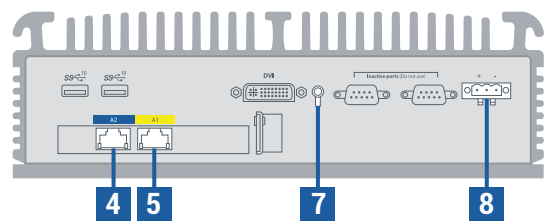


For ztC Edge Release Notes and documentation, please visit <http://ztcedgedoc.stratus.com>.
To access other ztC Edge self-help resources, including Knowledge Base articles and software downloads, visit Stratus Customer Service at <http://www.stratus.com/support>.

1 Connect keyboard and monitor to node, connect P1 port to your existing LAN, and then connect power to node.

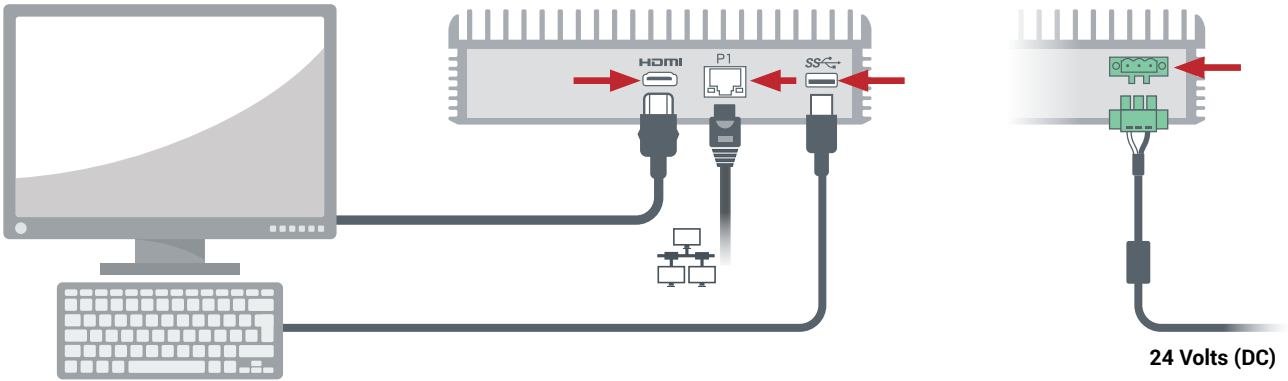


2 Node powers on automatically; otherwise, press power button. Wait for node to boot. Node might beep while booting, which is normal.

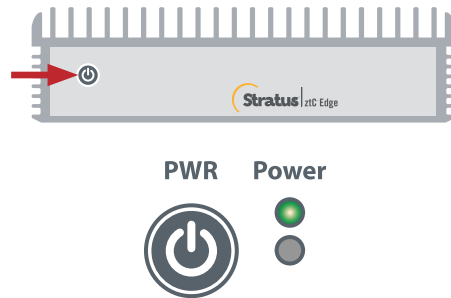


3 In **ztC Edge Deployment Wizard**, press **Enter** to begin deploying system and follow on-screen instructions.




4 Wait up to 5 minutes for system to display `https://nnn.nnn.nnn.nnn` address, and for SYS LED to flash. Record address for use in step 5.

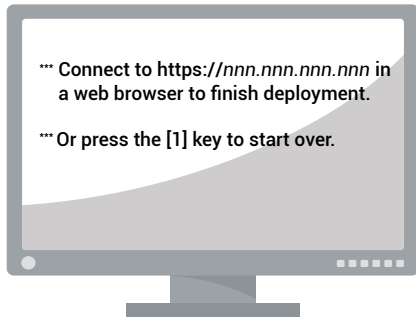


`https://_ _ _ . _ _ _ . _ _ _ . _ _ _`

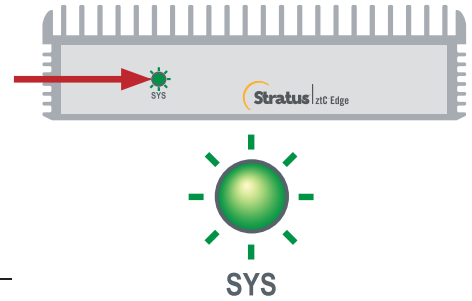

5 On PC or laptop with network connectivity to node, open web browser and enter address from step 4 to continue configuring system. If security message appears, follow browser instructions to allow site to load. Log on with default username and password of **admin** (or other credentials, if provided). Complete **EULA** and **Config** screens.

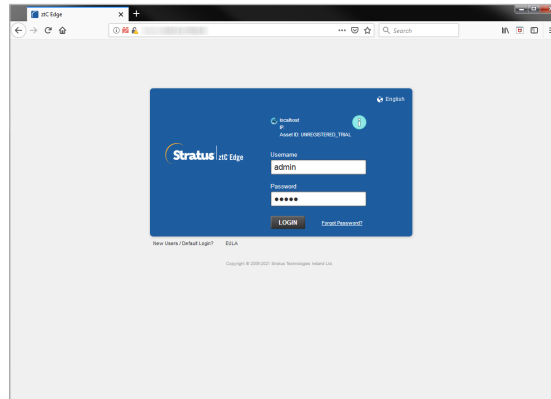


6 On **License** screen, follow link to register system and download permanent license key. Install license key on system and set new **admin** password to complete deployment (Note: If deploying second node now, continue with steps in **ztC Edge 100i/110i Systems: Adding a Node.**)

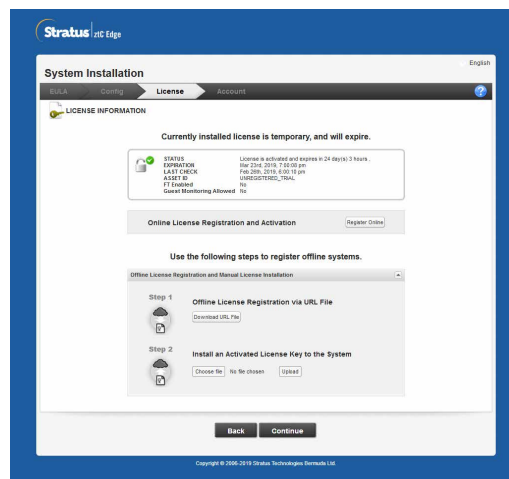

Recommended Before using system, ensure it is running latest software. See **Release Notes** for details and download software from <https://www.stratus.com/services-support/downloads>.

Optional Disconnect monitor and keyboard for headless operation. Fasten captive screws on power connector using 1/8" slotted screwdriver. Install user-supplied signal ground wire.

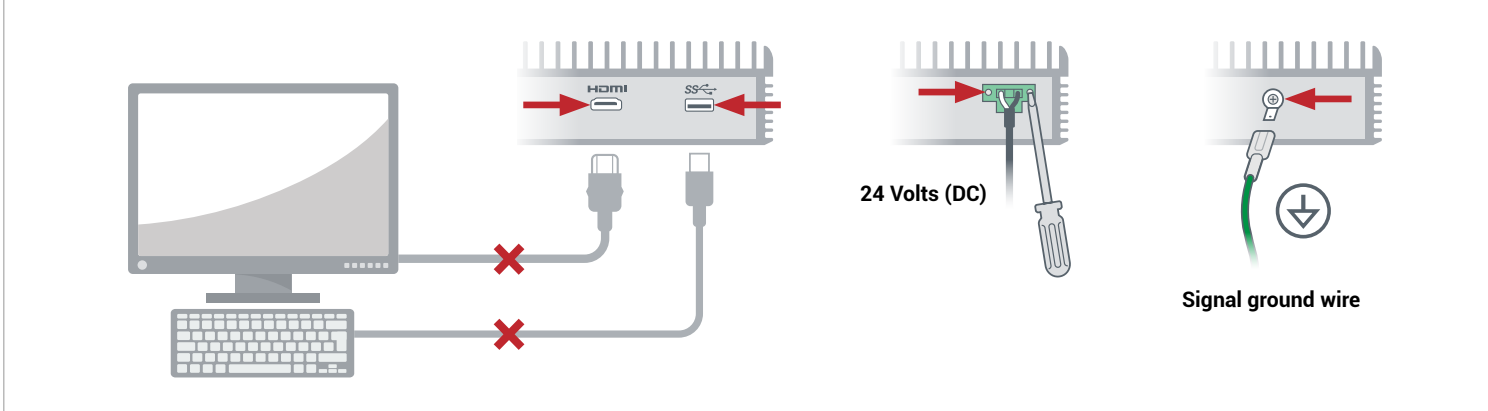

Optional Fasten DIN rail mount or wall mount to node using #2 Phillips screwdriver. Or, install rubber feet for freestanding node only.

